## **Tube and Pipe Clamps**

Ref. No: H04732A, Release Oct 2020 (Dimensions in mm)



## **Description**

Tube & pipe clamps are used in installations to provide rigid support to the pipes both in lateral & longitudinal directions releiving stresses caused by unequal movements in the pipe line.


The use of clamps will also prevent the transmission of vibrations from the pipe to the frame & vice versa. Loosening of joints , welds & leakage in the system can be avoided by the rigidity provided by the clamps.







## **Unit Dimensions**

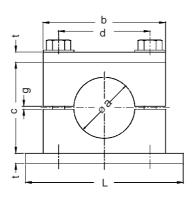

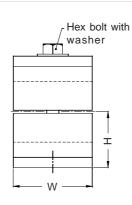


Table 1

Group No	Tube Size		L	С	t	g	b	d	W	н
	Øа	Code								
НА	06	006	73	32	8	1	55	33	30	24
	80	800								
	10	010								
	12	012								
	14	014								
	15	015								
	16	016								
	18	018								
НВ	20	020	85	48	8	1	70	45	30	32
	22	022								
	25	025								
	28	028								
	30	030								
HC	30	030	100	60	8	1	85	60	30	38
	35	035								
	38	038								
HD	38	038	140	90	10	2	115	90	45	55
	42	042								

## **Ordering Code**

